

70AFCD0051 SERIES ATEX LIMIT SWITCH BOX

INSTALLATION & MAINTENANCE MANUAL



FLUID SOLUTIONS

281 Ave. Pierre et Marie Curie - ZI NORD
13340 ROGNAC - FRANCE
Adresse postale : BP80015
13655 ROGNAC Cedex - FRANCE

Téléphone : + 33 4 86 30 70 80
Fax : + 33 4 86 30 70 81
<http://www.tuning-france.com>
e-mail: tuning@tuning-france.com

70AFCD0051 SERIES ATEX LIMIT SWITCH BOX INSTALLATION AND MAINTENANCE MANUAL

TABLE OF CONTENTS

GENERAL	1.0
STANDARD SPECIFICATION	2.0
MARKING	3.0
NEMKO ATEX FLAMEPROOF CERTIFICATION	4.1
INITIAL INSPECTION	4.2
STANDARD FEATURES	5.0
PRE-INSTALLATION	6.0
INSTALLATION	7.0
MOUNTING BRACKET	7.1
MOUNTING LIMIT SWITCH BOX	7.2
SETTING CAM	7.3
WIRING	7.4
MAINTENANCE	8.0
INSPECTION	9.0
STORAGE	10.0
TROUBLE SHOOTING	11.0
TOOLS	12.0
INSTALLATION AND MAINTENANCE TIPS	13.0



FLUID SOLUTIONS

281 Ave. Pierre et Marie Curie - ZI NORD
13340 ROGNAC - FRANCE
Adresse postale : BP80015
13655 ROGNAC Cedex - FRANCE

Téléphone : + 33 4 86 30 70 80
Fax : + 33 4 86 30 70 81
<http://www.tuning-france.com>
e-mail: tuning@tuning-france.com

70AFCD0051 SERIES ATEX LIMIT SWITCH BOX INSTALLATION AND MAINTENANCE MANUAL

1.0 General

TUNING 70AFCD0051/APL-5..N series limit switch box is designed to provide accurate and reliable valve position signalling and indicating of most valves or actuators manufactured.

70AFCD0051/APL-5..N limit switch box consists of a visual position indicator, quick-set cam assembly, terminal strip, switch assembly and easy mounting bracket. Quick-set cam allows for a quick and simple hand operation in the setting of switches.

2.0 Standard specification

Model	APL-5..N - 70AFCD0051
Enclosure Rated	Explosion proof : Ex d IIC T6 IP67
Enclosure	High grade aluminium alloy
Ambient Temperature	-20 deg C ~ + 60 dec C
Conduit Entries	Two G 3/4 (option : NPT 3/4, PT 3/4, PF 3/4, M25) 3 or 4 Conduit entries available upon request
Travel Angle	90 degree +/- 10%
Position Indicator	Open : Yellow, close : Red
Mechanical Switch	2-SPDT Mechanical Switch 16A 1/2HP 125/250VAC, 0.6A 125VDC, 0.3A 250VDC, 5A 125VAC
Terminal Strip	8 point (option : 9~14P)
External Coating	Dry powder polyester


3.0 Marking

- logo / Trade mark
- Model
- Mechanical switches type
- CE ATEX mark / Nemko ATEX cert.no.
- IEC Ex cert No.
- Ambient temp.
- Serial no.
- Manufacture year
- Cable entry size
- Warning
- Address








70AFCD0051 SERIES ATEX LIMIT SWITCH BOX INSTALLATION AND MAINTENANCE MANUAL

4.1 Nemko ATEX Flameproof certification


APL-series: APL-5..N - 70AFCD0051
CE xxxx  II2G
Ex d IIC T6 IP67
Nemko xx ATEX xxxx
Ambient temp.: -20°C to +60°C Cable entry
size : G3/4 Female, 2EA

NOTE :




1. Cable Connection

-  Sealing devices must be used and shall be fitted directly at enclosure wall when using conduit.
-  Cable glands shall be suitable for the environment and shall be certified as flameproof if used in Zone 1 application.
-  Cable glands and conduit to be installed minimum 6 full threads and the length of thread is minimum 8mm.
-  **“Warning”** : The temperature at cable entry and blanching point may exceed 70°C and 80°C respectively therefore select the appropriate cable gland and min 2SQ of wire is recommended when you install”
-  For cable entries or conduit entries that are not used, user or installer shall close by certified blanking elements (stopping plugs) so that the flameproof properties of the enclosure are maintained.

2. Groundings

-  Always ground the enclosure in accordance with local electric codes. The most effective enclosure grounding method is a direct connection to earth ground with minimal impedance. Methods for grounding the enclosure include:
Internal ground connection : The internal ground is located inside the body .
External ground connection : The ground bracket is located on the side of body.
(Min 2SQ wire required)

3. Special Condition for safe use (“X” marking)

-  Electrostatic discharge from window(over 1GΩ) may cause the ignition on the explosive gas atmosphere. By adapting the conducting window bolts make reduce the risk from electrostatic discharge.
-  Before installation or maintenance products , shut off incoming power and grounding should be connected.
-  The window must only be cleaned with a damp cloth in order to avoid ignition hazard caused by static electricity


4.2 Initial inspection

When the user receipt the product, inspect the condition of the product and ensure the name plate comparing with order sheet.

- Remove packing wrap or cardboard box carefully. Inspect the product for any physical damage that may have occurred during shipment.
- Check the product specification with product ordered. If a wrong product have been shipped, immediately report to our coordinator.

70AFCD0051 SERIES ATEX LIMIT SWITCH BOX INSTALLATION AND MAINTENANCE MANUAL

5.0 Standard Features

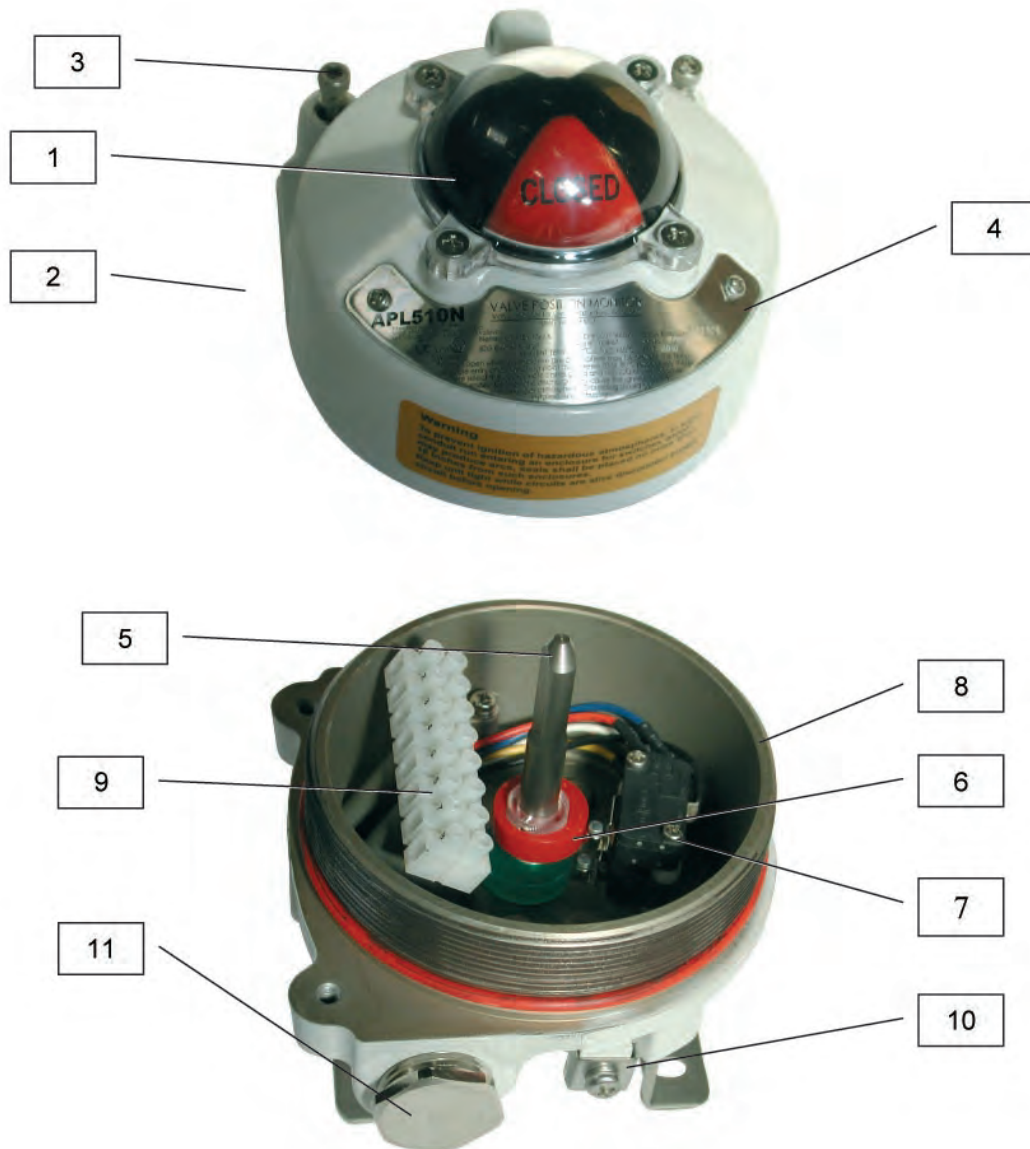

No.	Part Name	Q'ty	Description
1	Window / Indicator	1	PC / ABS
2	Cover	1	Aluminium Die casting
3	Captive Cover Bolt	4	Stainless steel
4	Name Plate	1	Stainless steel
5	Shaft	1	Stainless steel
6	Cam	2	PC
7	Switch	2	-
8	Body	1	Aluminium Die casting
9	Terminal Strip	1	8P (9~14P available)
10	Earth Lug	2	Stainless steel
11	Blanking Element	2	Al.Plug

70AFCD0051 SERIES ATEX LIMIT SWITCH BOX INSTALLATION AND MAINTENANCE MANUAL

6.0 Pre-Installation for use in potentially explosive atmosphere

Model	APL-5. .N - 70AFCD0051
Type of enclosure	Ex d IIC T6 IP67
Ambient temperature	-20 deg C ~ + 60 deg C

Installation, commissioning, maintenance, repairs and modification work must only be performed by qualified personnel with extensive knowledge on how to work on explosion-proof electrical equipment.

Warning :

- ✓ ***Read this installation and maintenance manual carefully and completely before attempting to install, operate, or troubleshoot the HKC product.***

7.0 Installation



7.1 Mounting bracket

Caution ;

- ✓ ***Where limit switch box or one of parts are to be moved, installed, disassembled, reassembled by a hand, care must be taken not to cause injury by the harmful sharp edges of corners or rough surfaces or residual electricity.***

TUNING shall supply a NAMUR VDI/VDE standards' bracket and a fixing stuff for mounting on actuator. Bracket shall be applicable to any type of valves; manual valve, linear valve, pneumatic rotary valve.

- Insure valve actuator alignment (fully open or closed).
- Place the mounting bracket on a horizontal plane of actuator
- Tighten the bolts enclosed in a box using a proper tool.

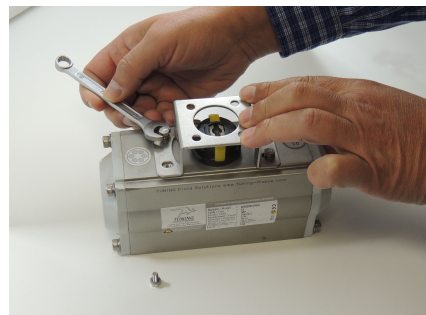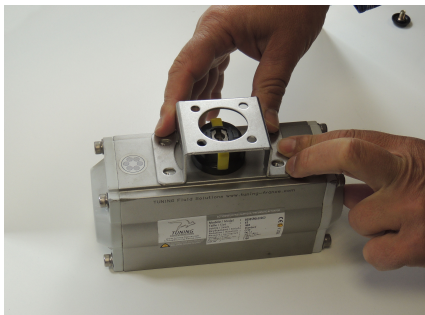

7.2 Mounting limit switch box

Note :

- ✚ **Prior to mounting the limit switch box must be checked for any damage.**
- ✚ **Damaged parts must be replaced by original spare parts.**

Caution ;

- ✓ ***Do not attempt to work on limit switch box without first shutting off incoming power***

Limit switch boxes are available with a NAMUR shaft that enables direct attachment to actuator pinion without a coupler. These shaft feature a 4mm wide tang that engages the 4mm slot in NAMUL actuators.

- Check to be sure the drive slot on the top of the actuator and the shaft of switch box are the same direction.

70AFCD0051 SERIES ATEX LIMIT SWITCH BOX INSTALLATION AND MAINTENANCE MANUAL

- Insert the shaft of switch box carefully into the mounting bracket.
- Tighten the bolts enclosed in a box using a proper tool.
- Check the connection of shaft being assembled correctly.



7.3 Setting cam




The colour of cams harmonized with position indicator help us to set the cams easily without wiring diagram. Cams shall be easily set without tool. 70AFCD series cams are splined and can be setting lift up or push down the cam from gear by hand in a seconds without setting tools. Self-locking, spring loading make never slip out of adjustment.

Note :

- Basically cams shall be set by manufacturer before shipment.

- Loose the captive cover bolts with a applicable tool. (L-Hex. Wrench recommended)
- Turn the cover counter clockwise to open carefully.
- Open cam setting

- Electric power or air supply of valve actuator on to operate the actuator fully open

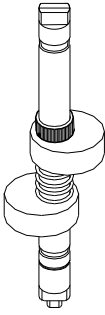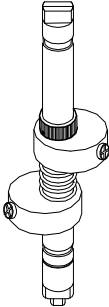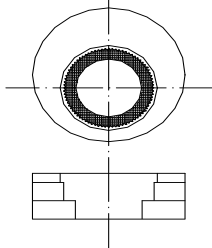Mechanical switches	Proximity sensors	Splined cam
		

- Lift the bottom yellow cam up and rotate it until the switch is activated.
- And then release it. Cam shall be back into a stable position by itself.
- Close cam setting
 - Electric power or air supply of valve actuator off to operate the actuator fully close
 - Push the upper cam down and rotate it until the switch is activated.
 - And then release it. Cam shall be back into a stable position by itself.

70AFCD0051 SERIES ATEX LIMIT SWITCH BOX INSTALLATION AND MAINTENANCE MANUAL

7.4 Wiring

Danger ;


- ✓ **HAZARDOUS VOLTAGE.** No electrical power should be connected until all wiring and limit switch adjustments have been completely.

70AFCD limit switch box enclosure feature prewired switches. All user connections are made at a numbered terminal strip. A wiring diagram, located inside the cover, indicates which terminal numbers correspond to switch contacts, such as normally open (NO), normally closed (NC), etc. Follow the wiring diagram and electrical code to connect the switches to your system.

Solenoid valve may also can be wired through the 70AFCD enclosure. Two auxiliary terminals are included as standard.

70AFCD limit switch box has two cable entries on the body and supply a blanking plug not a cable gland which meet the type of protection. Cable gland shall be applied by installer or user.

MECHANICAL SWITCH(2 SPDT)

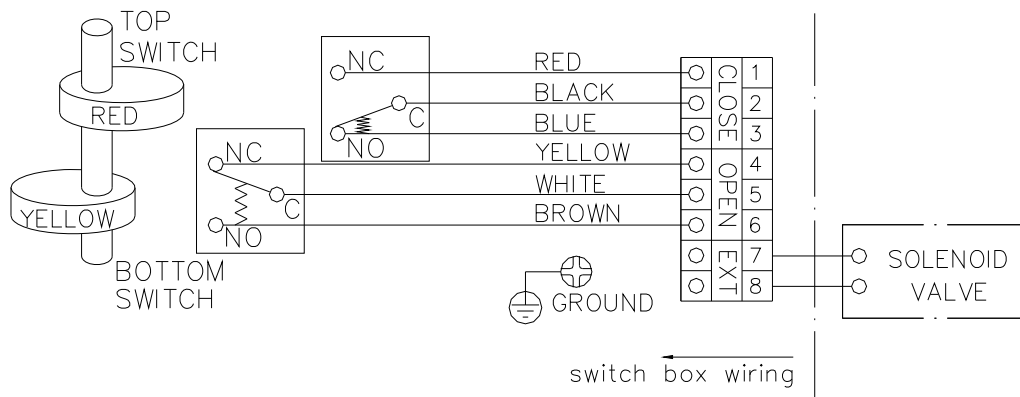

Note ;

- Grounding should be connected until all wiring have been completely.
- Internal/External grounding wire square shall be min.2SQ. recommended.

70AFCD0051 SERIES ATEX LIMIT SWITCH BOX INSTALLATION AND MAINTENANCE MANUAL

8.0 Maintenance

Caution ;

- ✓ ***Shut off incoming power or air supply on the valve actuator before maintenance limit switch box.***
- ✓ ***Be sure that the area is clean before disassemble and maintenance limit switch box. Clean all parts and housing before re-assemble.***
- ✓ ***Refers to the part list when ordering replacement or spare parts.***

Maintenance, under normal conditions at six month intervals or 100,000 cycle operation. But when conditions are more severe, more frequent inspections may be required.

- Insure valve actuator alignment
- Insure wiring is insulated, connected and terminated properly
- Insure all screws are present and tight
- Insure cleanliness of internal electrical devices
- Insure conduit connections are installed properly and are dry
- Check internal devices for condensation
- Check enclosure O rings seals and verify that the O ring is not pinched between housing
- Visually inspect during open/close cycle
- Inspect identification labels for wear and replace if necessary

Warning ;

- ✓ ***Flameproof enclosure! Before opening, ensure the absence of gas and voltage.***
- ✓ ***Treat cover with care. Gap surfaces must not be damaged or dirtied in any way.***

9.0 Inspection

- The limit switch box should be inspected upon receipt to ensure that no damage has been sustained on transit.
- Check the item and quantity of products with packing list or related documents.
- Check the limit switch box o-ring. Where a damage on it, it caused the corrosion of internal parts.
- Check the adjustment of cams. Cams shall be released when those have been used for a long period of operating. If do so, they don't work correctly with switches.

10.0 Storage

The products must be stored in a clean, cool and dry area. The unit shall be stored with the cover installed and the conduit openings sealed. Storage must be off the floor, covered with a sealed dust protector.

70AFCD0051 SERIES ATEX LIMIT SWITCH BOX INSTALLATION AND MAINTENANCE MANUAL

11.0 Trouble shooting

The following instructions are offered for the most common difficulties encounter during installation and start-up.

Signal fails to main control room.

- Check the wiring of limit switch box in accordance with wiring diagram.
- Check where the cams or switches are damaged or broken.
- Check the main signal wire from the terminal strip.
- Re-set the limit switch box.
- Verify the current position transmitter resistance value.
- Check potentiometer gear jamming.
- Check the zero and span calibration.
- Check the card damaged or not.

12.0 Tools

- 1 Set Metric Allen Key (Hex Wrench)
- 1 Set Screw Drivers
- 1 Set Metric Spanner
- 1 Wire Stripper long Nose
- 1 Needle nose plier
- 1 Multi Meter (AC, DC, Resistance)

70AFCD0051 SERIES ATEX LIMIT SWITCH BOX INSTALLATION AND MAINTENANCE MANUAL

13.0 Installation and Maintenance Tips

For any installation and maintenance work, the following should be observed :

Caution :

- ✓ *A regular inspection and maintenance performed by qualified and trained personnel*
- ✓ *When working in potentially explosive areas, observe the standard EN 60079-14 "Electrical Installations in Hazardous Areas".*
- ✓ *Work at the open actuator under voltage must only be performed if it is assured that for the duration of the work there is no danger of explosion.*
- ✓ *Observe additional national regulations.*

- Check the limit switch box visually. Ensure that no outside damage or changes are visible. The electric connecting cables must be without damage and wired correctly.
- Cable entries, cable glands, plugs etc. have to be checked for correct tightness and sealing.
- Check whether Ex-connections are fastened correctly.
- Take care of possible discolouration of the terminals and wires.
- Check the flame path gaps of flameproof enclosures for dirt and corrosion. Since the dimensions of all Ex gaps are strictly defined and inspected, no mechanical work shall be performed on them.
- Ensure that all housing covers are handled carefully and that the seals are checked.
- All cable have to be checked.
- If defects which affect the safety are detected during maintenance, repair measures have to be taken immediately.
- Any kind of surface coating for the gap surface is not permitted.
- When exchanging parts, seals etc. only original spare parts shall be used.

Warning ;

- ✓ ***Flameproof enclosure! Before opening, ensure the absence of gas and voltage.***



FLUID SOLUTIONS

281 Ave. Pierre et Marie Curie - ZI NORD
13340 ROGNAC - FRANCE
Adresse postale : BP80015
13655 ROGNAC Cedex - FRANCE

Téléphone : + 33 4 86 30 70 80
Fax : + 33 4 86 30 70 81
<http://www.tuning-france.com>
e-mail: tuning@tuning-france.com